



Assembly manual
for joined/ connected units
Connection on 2 levels



SOGECO S.A.
L I V I N G

1

2

3

4

5

6

7

8

A

A

External

Connection kit set


Option 1

B


B

C

C

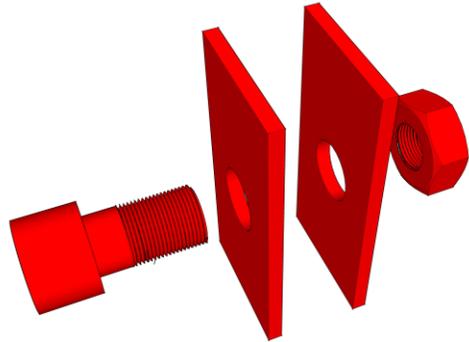


**Horizontal
Connection plate**

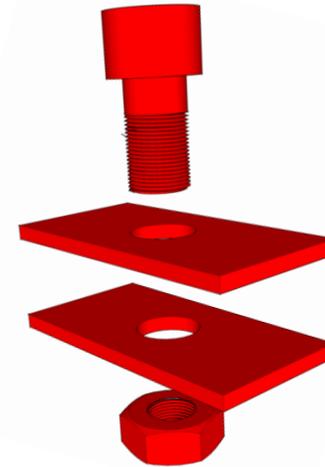

**Vertical
Connection plate**

D

D

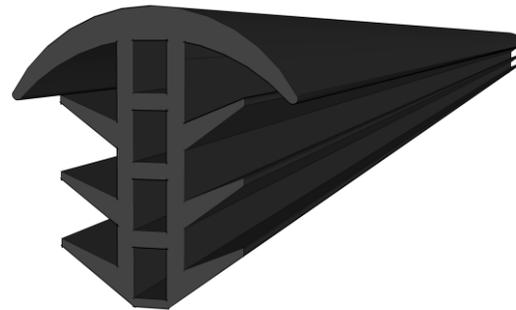

Gasket/ sealing rubber

E

E

F

F



1

2

3

4

5

6

7



1

2

3

4

5

6

7

1

2

3

4

5

6

7

8

A

A

External

Connection kit set

Option 2

B

B

C

C



Twist lock
(for vertical connection)




Container bridge connector
(for horizontal connection)

D

D

E

E

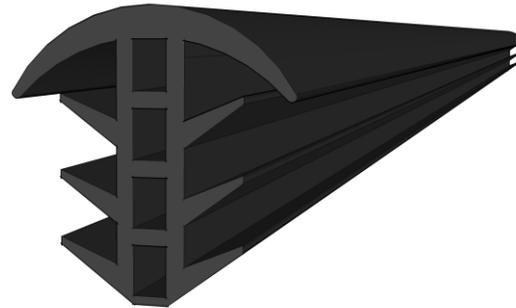

Gasket/ sealing rubber

F

F



1

2

3



4

5

6

7

**For Vertical connection:
Fix the Twist locks on all top
corners of the flatpack
containers in the lower level.**

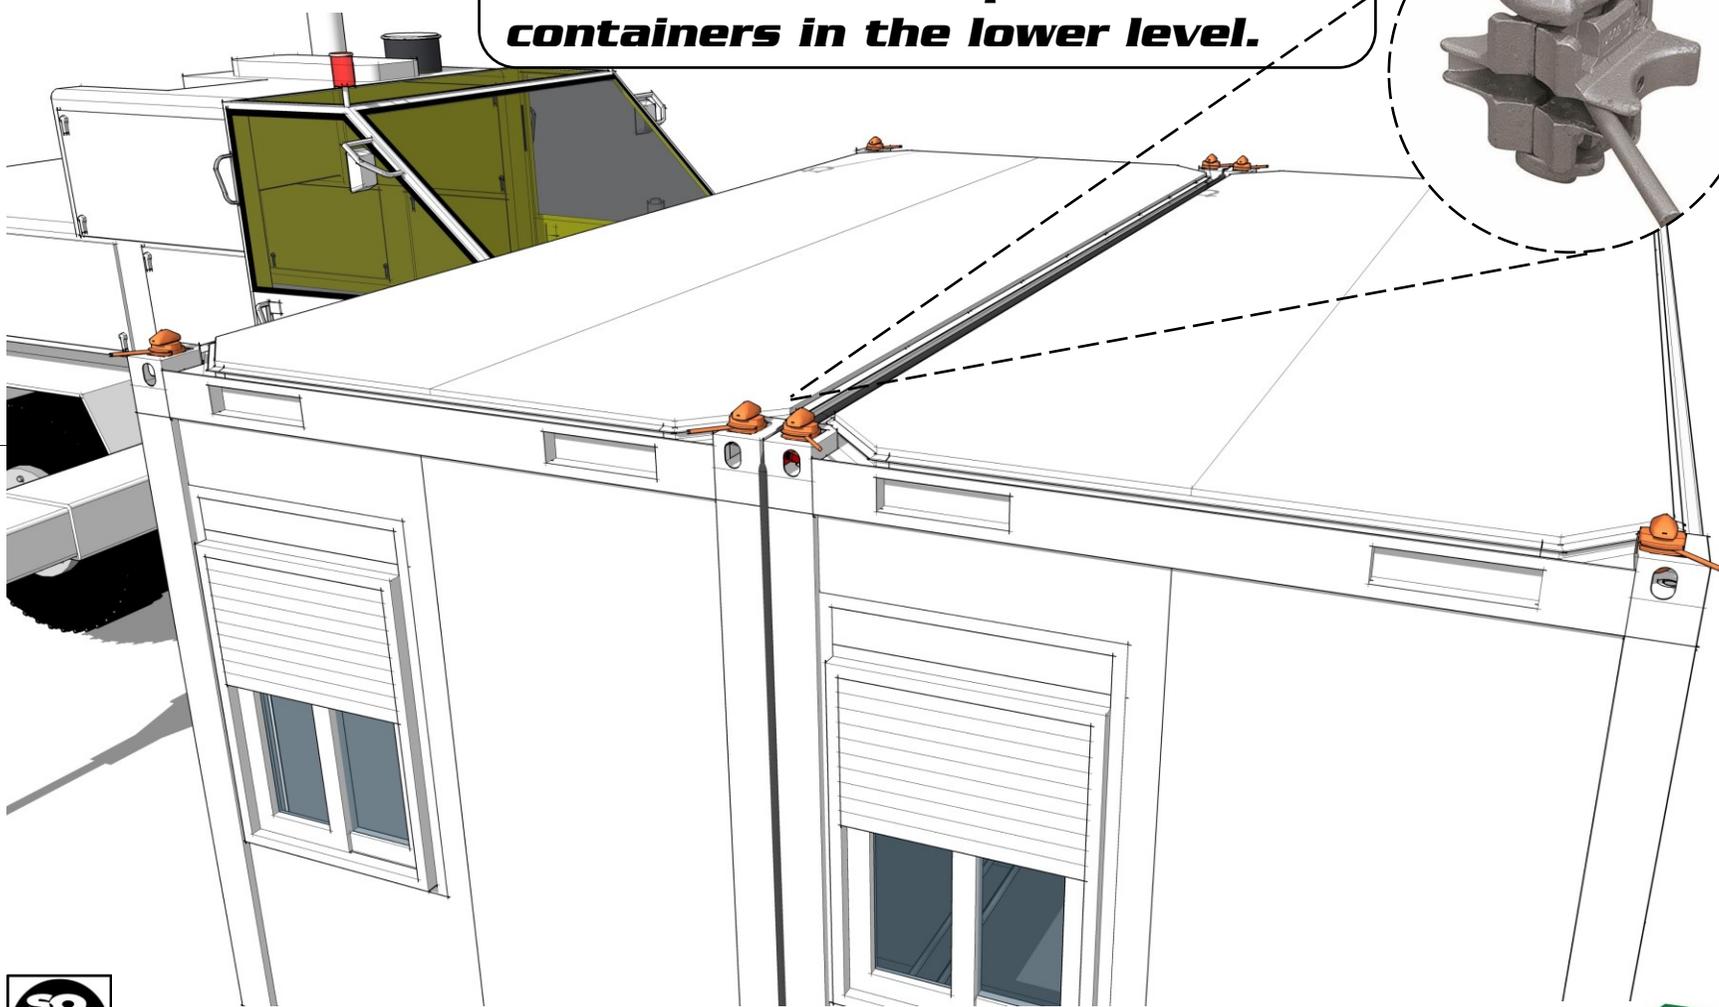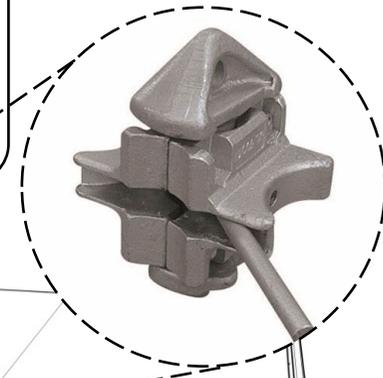

1

2

3

4

5

6

7

8

A

B

C

D

E

F

A

B

C

D

E

F

Prepare the flatpack containers to be installed in upper level.



1

2

3


4

5


6

7


Position the flatpack containers and check alignment. Lock it in place.

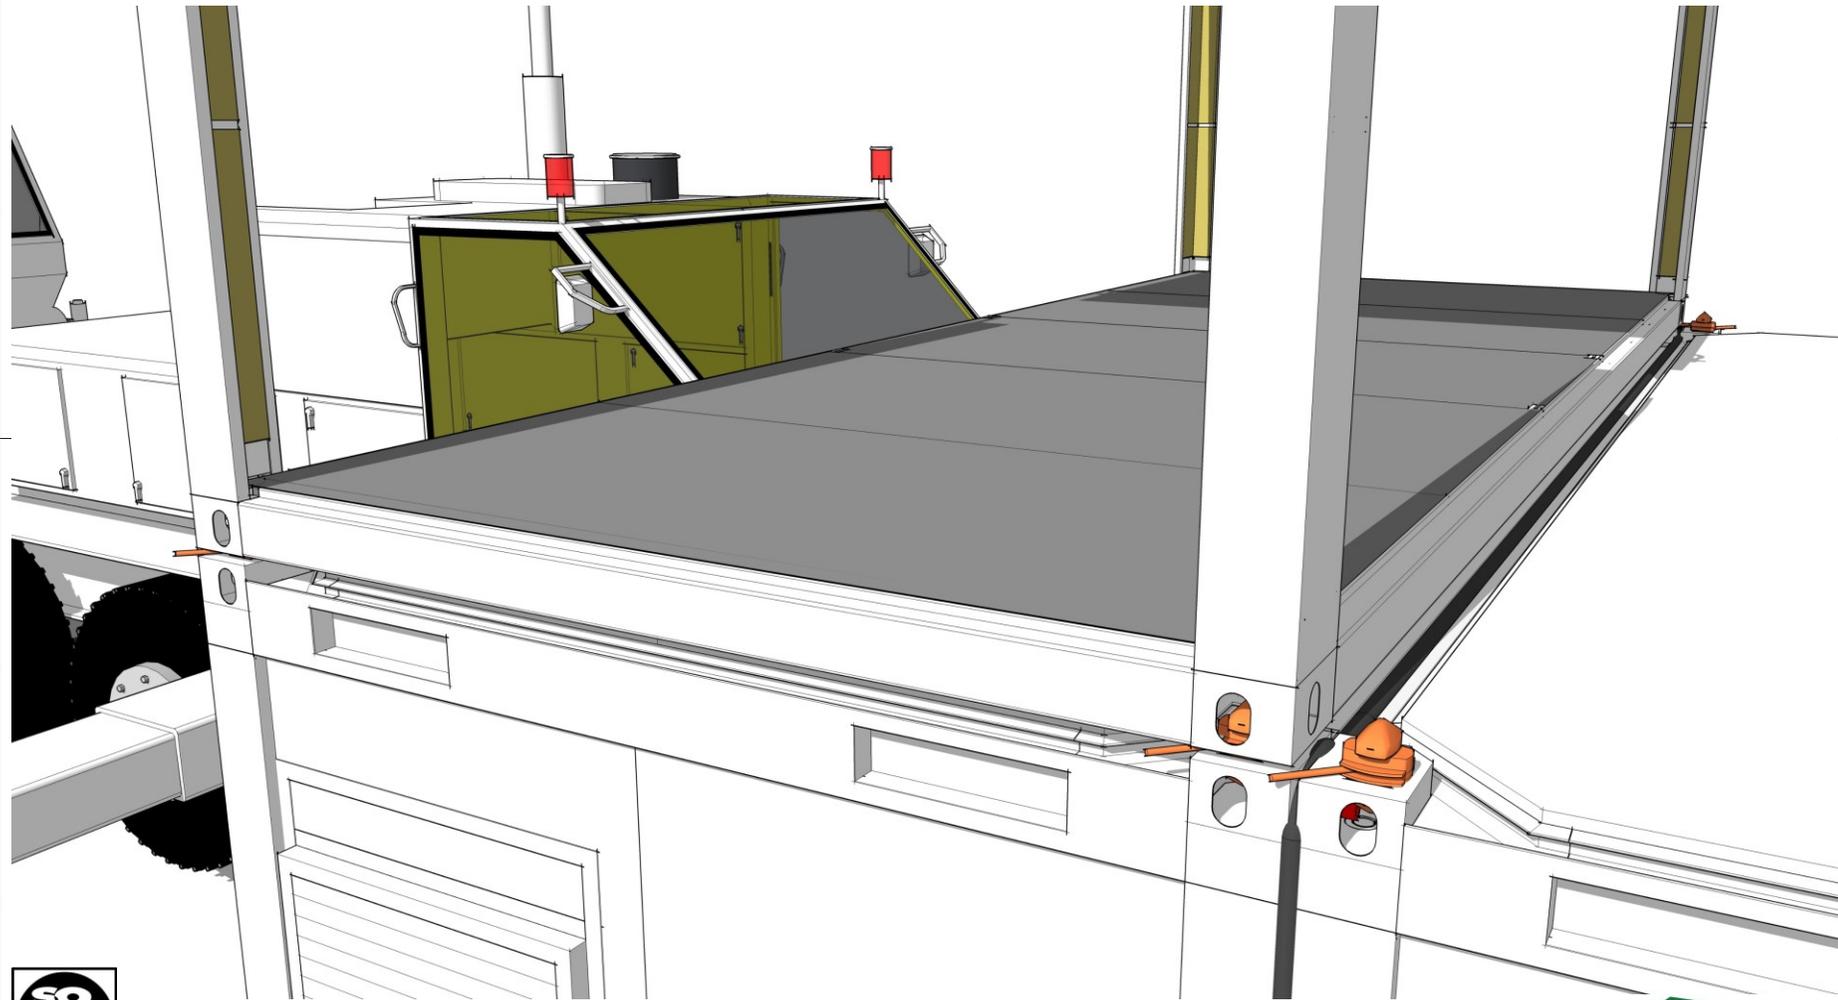



Position the next flatpack containers and repeat the same step.

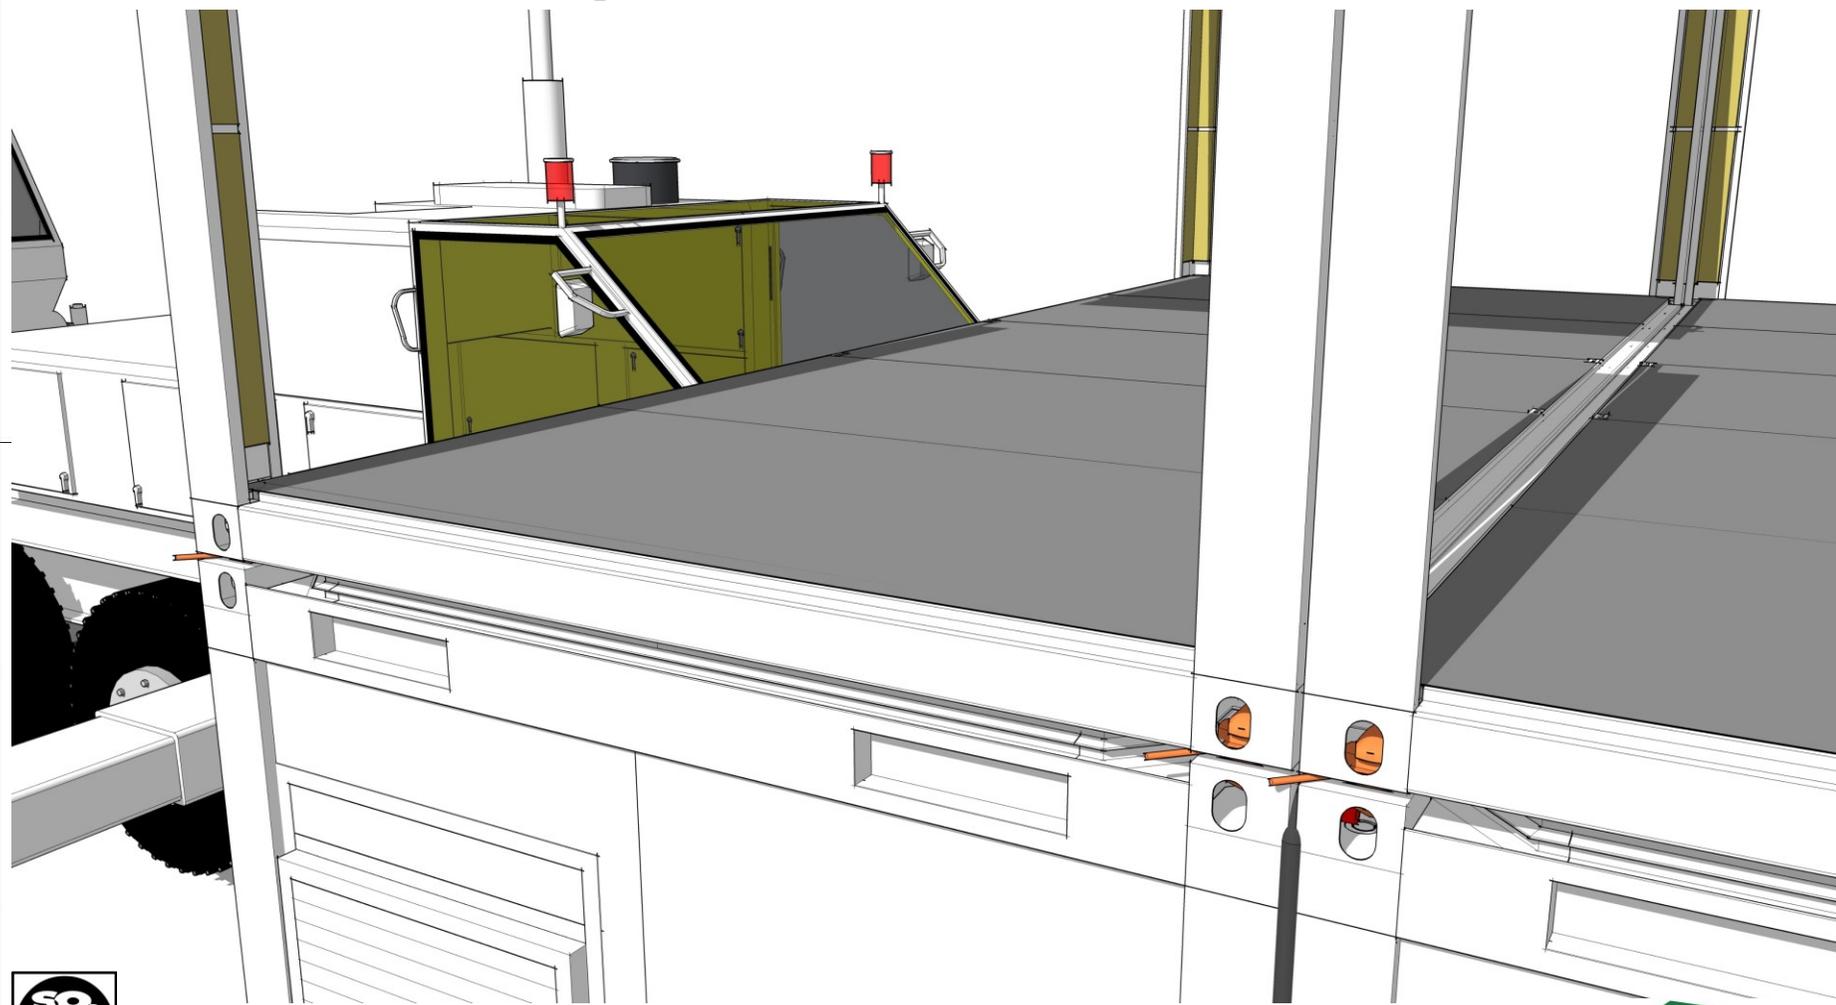


Install the rubber seal/gasket as mentioned in the previous steps.

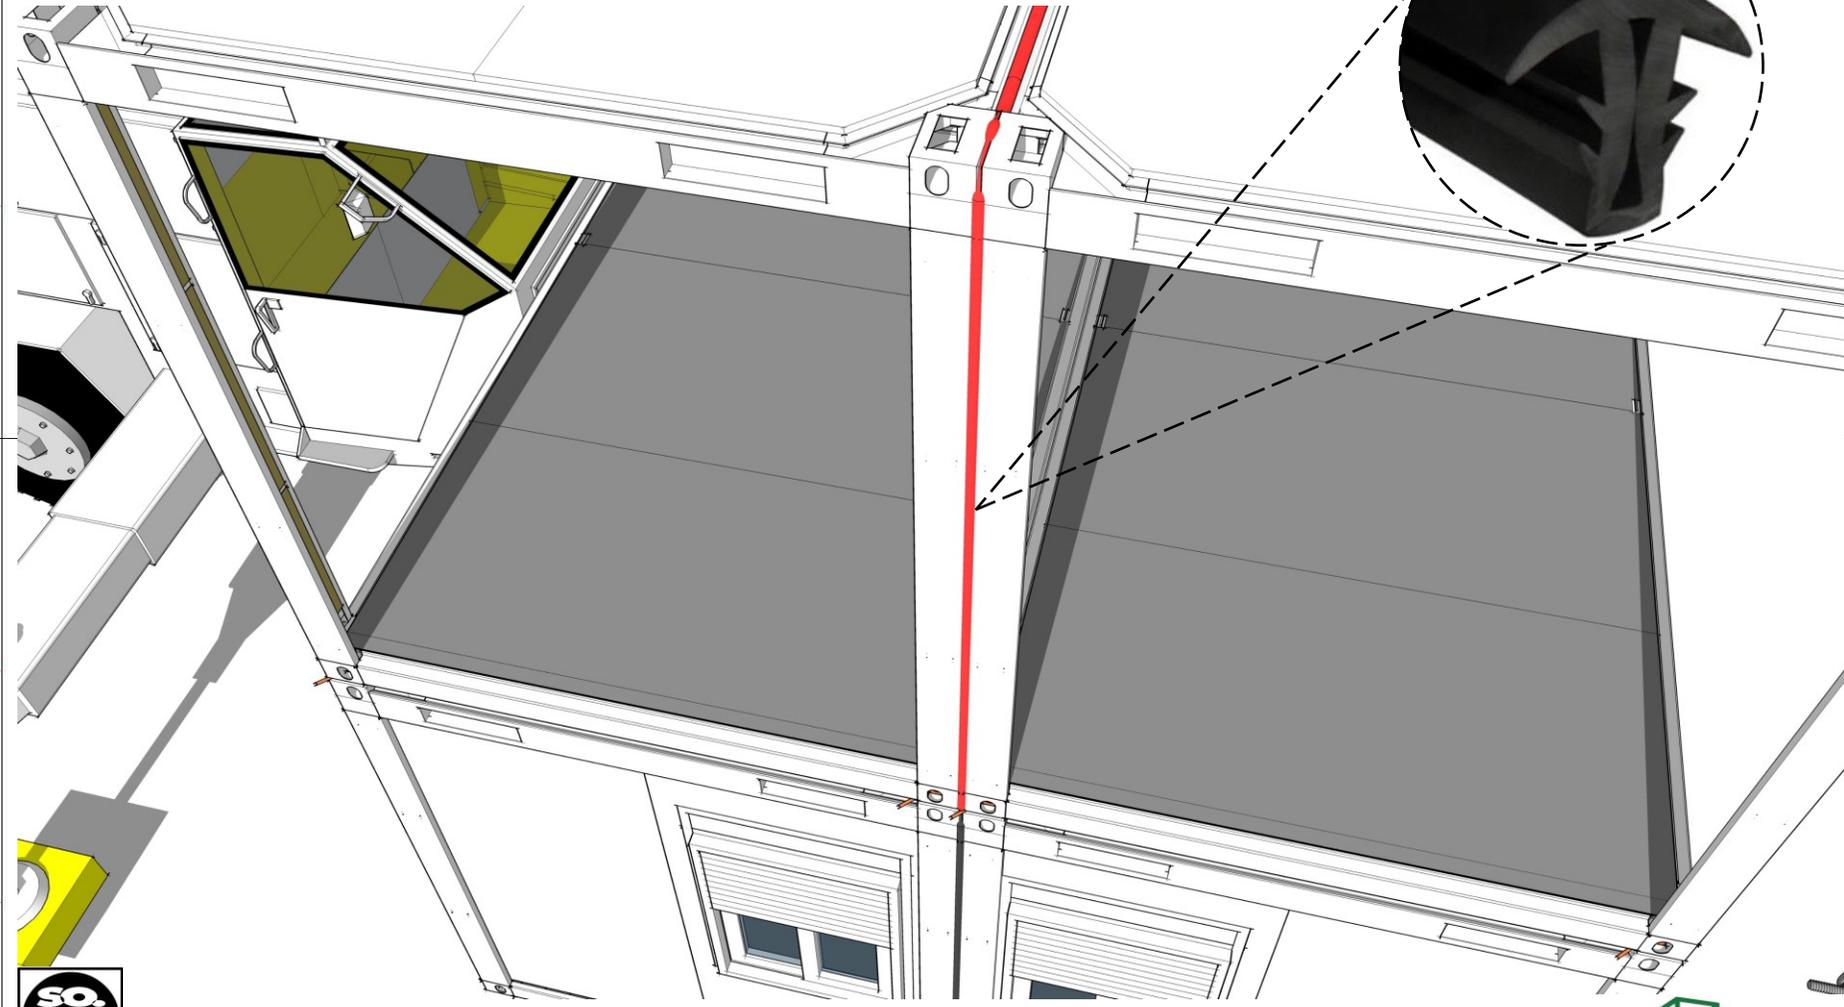


**For Horizontal connection:
Install the container bridge connectors
on top and bottom corners as shown.
Observe carefully the alignment when
tightening.**

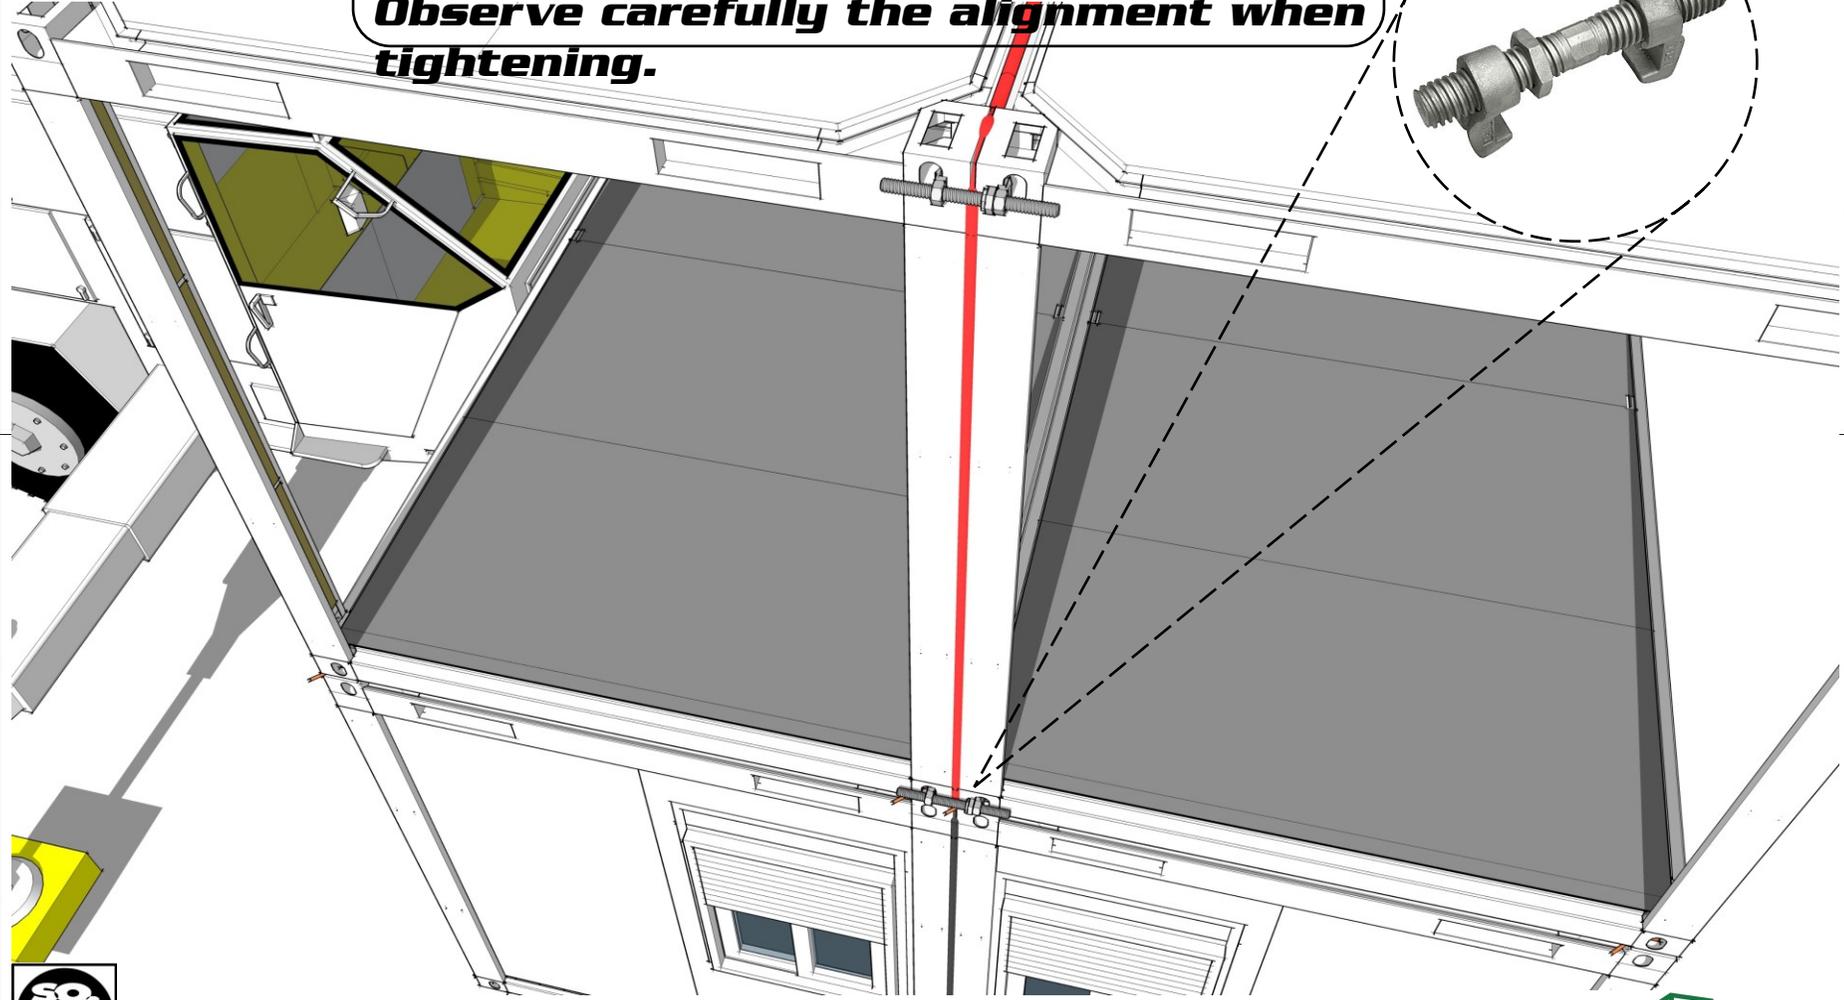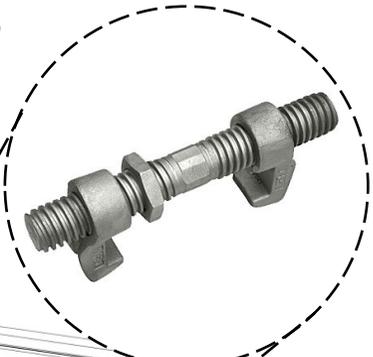

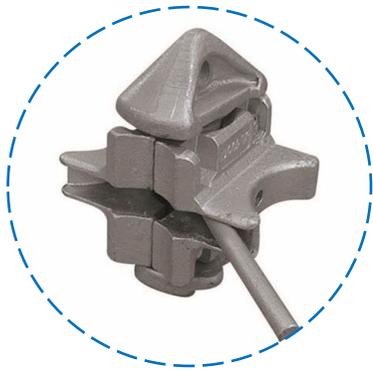

Twist lock

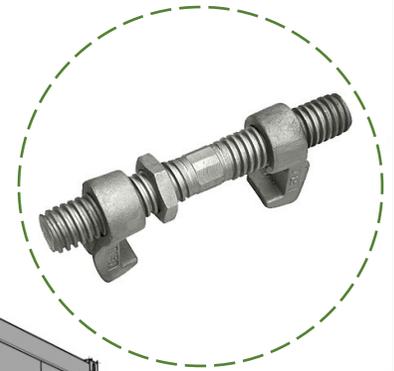

Container bridge

